


COMPLETED SHOULDER


CRITERIA FOR USING TREATMENT TYPE R1

Project

- is resurfacing, widening and resurfacing or construction of shoulder pavement
- is rural or is urban without curb and gutter
- has good existing soil and turf with no significant shoulder erosion (Isolated areas of significant erosion will require additional special treatment. Where poor soil and/or turf conditions exist shoulder reworking, Type R-2, should be applied.)
- resurfacing build-up is 1-1/2" to 3"

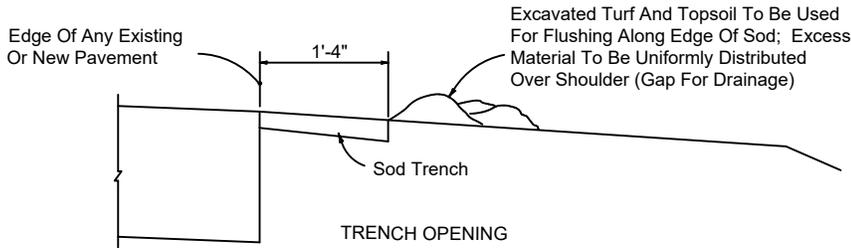

TRENCH OPENING

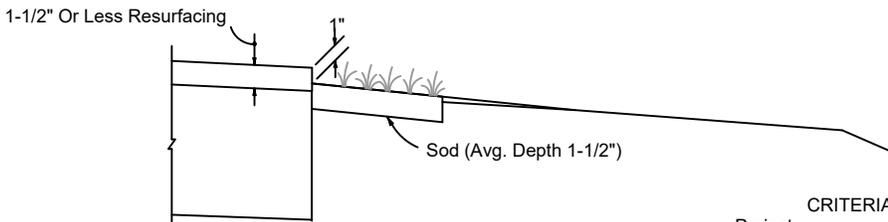

COMPLETED SHOULDER

CRITERIA FOR USING TREATMENT TYPE R-3

Project

- is resurfacing, widening and resurfacing or construction of shldr. pavt.
- is rural or is urban without curb and gutter
- has good existing soil and turf with no significant shoulder erosion (isolated areas of significant erosion will require additional special treatment. Where poor soil and/or turf conditions exist shoulder reworking, Type R-2, should be applied.)
- resurfacing build-up is 1-1/2" or less

NOT TO SCALE

SHOULDER SODDING AND REWORKING DETAIL